



TopBytes DXSpotter

<https://DXSpotter.topbytes.net>

Release 1.2.0

User Manual

Apr 11, 2026

CONTENTS:

1	Introduction	3
1.1	What is DX Spotter?	3
1.2	Key Features	3
1.3	How It Works	5
1.4	Typical Use Cases	5
1.5	Design Philosophy	6
1.6	What's Next?	7
2	Getting Started	9
2.1	Unboxing and First Power-On	9
2.2	First Boot Sequence	9
2.3	Connecting to the Configuration Portal	10
2.4	Configuration Page Interface	10
2.5	Basic Configuration Example	12
2.6	Saving and Rebooting	12
2.7	Verifying Successful Setup	13
2.8	Serial Monitor Messages	13
2.9	What's Next?	13
3	Configuration	15
3.1	Accessing Configuration After Initial Setup	15
3.2	Device Information	16
3.3	WiFi Configuration Options	16
3.4	DX Cluster Configuration Options	18
3.5	Display Configuration Options	20
3.6	Configuration Examples	25
3.7	Saving Configuration Changes	28
3.8	Configuration Backup	28
3.9	What's Next?	28
4	Operation	29
4.1	Understanding the Display	29
4.2	Normal Operation	30
4.3	Understanding Spot Information	31
4.4	WiFi Connection Status	32
4.5	DX Cluster Connection Status	33
4.6	Serial Monitor Operation	34
4.7	Daily Usage Tips	35
4.8	Placement Recommendations	36
4.9	Typical Operating Scenarios	36
4.10	What's Next?	37
5	Troubleshooting	39
5.1	Quick Diagnostic Checklist	39
5.2	WiFi Connection Issues	39

5.3	DX Cluster Connection Issues	41
5.4	Display Issues	44
5.5	Configuration Issues	45
5.6	Serial Monitor Issues	47
5.7	Getting Help	47
5.8	Advanced Diagnostics	48
5.9	Common Error Messages	49
5.10	Emergency Recovery	50
6	Advanced Features	51
6.1	Over-The-Air (OTA) Firmware Updates	51
6.2	Advanced WiFi Configuration	52
6.3	Advanced Display Customization	53
6.4	Advanced Filter Commands	54
6.5	Serial Console Advanced Usage	55
6.6	Network Administration	56
6.7	Time Synchronization	57
6.8	Power Consumption and Optimization	57
6.9	What's Next?	58
7	Technical Specifications	59
7.1	Hardware Specifications	59
7.2	Network Specifications	61
7.3	Display Specifications	62
7.4	Performance Specifications	63
7.5	Compatibility	64
7.6	Support and Documentation	65
8	Compliance	67
8.1	Radio Equipment Information	67
8.2	RF Exposure Information	67
8.3	Safety Warnings	68
8.4	Intended Use	69
8.5	WEEE — Waste Disposal Information	69
8.6	Manufacturer	70
8.7	Firmware Updates	70
9	Changelog	71
9.1	Version 1.2.0	71
9.2	Version 1.1.1	71
9.3	Version 1.1.0	72
9.4	Version 1.0.9	72
9.5	Version 1.0.8	73
9.6	Version 1.0.7	73
9.7	Version 1.0.6	74
9.8	Version 1.0.5	75
9.9	Version 1.0.4	75
9.10	Version 1.0.2	77
9.11	Version History	78
10	Quick Links	79
11	About This Manual	81
12	Regulatory and Safety Information	83
13	Support	85
	Index	87

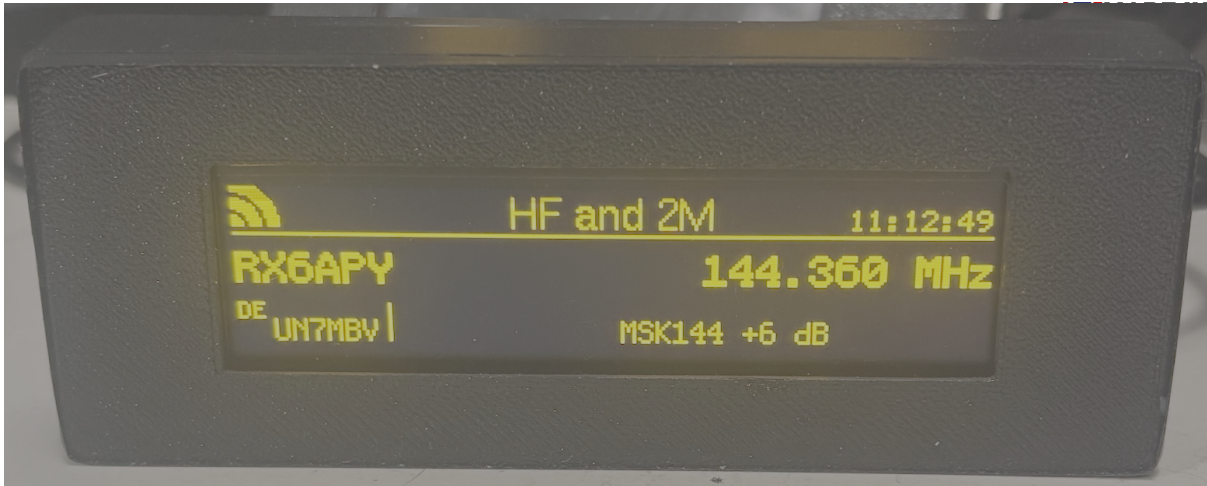


Fig. 1: The DX Spotter Display Unit

Welcome to the DX Spotter user manual. This comprehensive guide will help you set up, configure, and operate your DX Spotter device.

The DX Spotter is a compact, WiFi-enabled device that connects to DX cluster networks and displays real-time amateur radio spot information on a high-contrast yellow OLED display. It provides an elegant solution for monitoring band activity and DX opportunities.

We have partnered with hamserve, <https://dxc.hamserve.uk> as the default DX Cluster to connect. Hamserve DX cluster is hosted in a data center with excellent bandwidth and uptime statistics, making it a great choice for receiving your DX Spots.

INTRODUCTION

1.1 What is DX Spotter?

The DX Spotter is a dedicated amateur radio accessory that provides real-time DX cluster spot information on a compact, easy-to-read display. Designed for ham radio operators, it eliminates the need to have a computer or mobile device running to monitor band activity.

1.2 Key Features

1.2.1 WiFi Connectivity

- Store up to 5 WiFi network credentials with priority-based connection
- Automatically connects to the best available network
- Built-in configuration portal for easy setup
- Intelligent automatic reconnection - tries all configured networks in priority order when connection drops
- Support for WPA/WPA2 secured networks
- Seamless roaming between configured networks
- mDNS/Bonjour support - device discoverable as <devicename>.local
- Configurable DHCP hostname for network identification

1.2.2 DX Cluster Integration

- Real-time connection to DX cluster networks via Telnet
- Support for standard DX cluster protocols
- Displays frequency, callsign, and spot comments
- Automatic spot parsing and formatting

1.2.3 Display Features

- High-contrast 256x64 yellow OLED display
- Smooth scrolling animation between spots
- WiFi signal strength indicator
- Real-time clock display
- Configurable display title based on band filter

1.2.4 Band Filtering

- Configure spot filtering by band
- Display only the spots you're interested in
- Custom filter commands supported
- Automatic display title generation based on filter

1.2.5 User-Friendly Configuration

- Web-based configuration interface
- Captive portal for initial setup
- Available network scanning built into configuration page
- Save and restore settings to non-volatile memory
- Factory reset button for easy device reset
- On-screen error messages for connection and filter issues
- Device ID displayed for easy identification

1.2.6 Customization Options

- Configurable scroll interval (how long each spot is displayed)
- Adjustable spot history size (1-15 spots)
- Custom display title
- Band-specific filtering
- Callsign identification
- Configurable device name for network identification
- Display rotation (normal or 180 degrees) for upside-down mounting

1.2.7 Over-The-Air Updates

- Firmware updates via OTA (Over-The-Air)
- No need to connect to computer for updates
- Secure HTTPS-based update mechanism
- Automatic version checking

1.2.8 Software Requirements

- A web browser (on computer, tablet, or smartphone) for initial configuration
- Access to a DX cluster server (several public clusters available)

1.2.9 Amateur Radio Requirements

- A valid amateur radio callsign
- Basic understanding of DX cluster operation
- Knowledge of the bands you wish to monitor

1.3 How It Works

The DX Spotter operates in a simple four-stage process:

1. **Power On:** When first powered, the device attempts to connect to a saved WiFi network. If no network is configured, it creates its own WiFi access point for configuration.
2. **Configuration:** Using the web-based configuration portal, you provide your WiFi credentials, DX cluster server details, and your amateur radio callsign.
3. **Connection:** Once configured, the device connects to your WiFi network and establishes a telnet connection to the specified DX cluster server.
4. **Display:** DX spots are received, parsed, and displayed on the OLED screen with smooth scrolling animations. The display continuously updates as new spots arrive.

1.4 Typical Use Cases

1.4.1 Station Monitoring

Keep the DX Spotter on your desk or operating position to monitor band activity without dedicating a computer or mobile device screen.

1.4.2 Portable Operations

Take the DX Spotter to field day, portable operations, or camping. It only requires WiFi connectivity and USB power (power bank compatible).

1.4.3 Contest Monitoring

During contests, filter for your favorite band and watch for rare multipliers or new contacts.

1.4.4 DX Hunting

Set up band-specific filters to monitor for DX openings on specific bands you're interested in working.

1.4.5 Learning Tool

New hams can use the DX Spotter to learn about band activity, propagation, and when different bands are "open" for DX.

1.5 Design Philosophy

The DX Spotter was designed with the following principles in mind:

1.5.1 Simplicity

Configuration should be straightforward and not require technical expertise beyond basic WiFi setup.

1.5.2 Reliability

The device should automatically recover from network disconnections and reconnect to the DX cluster without user intervention.

1.5.3 Readability

The display should be easy to read from a distance, with clear contrast and appropriate font sizes.

1.5.4 Efficiency

Power consumption should be minimal, making the device suitable for portable operations with battery power sources.

1.5.5 Openness

The device supports standard DX cluster protocols and can work with any compatible cluster server.

1.6 What's Next?

Now that you understand what the DX Spotter is and what it can do, proceed to the *Getting Started* section to learn how to set up your device for the first time.

GETTING STARTED

This section will guide you through the initial setup of your DX Spotter device.

2.1 Unboxing and First Power-On

2.1.1 What's in the Box

Your DX Spotter package should contain:

- DX Spotter device
- USB power cable

2.1.2 Initial Power-Up

1. Connect the USB power cable to the DX Spotter's power port
2. Connect the other end to a USB power source (wall adapter, computer, or power bank)
3. The display will illuminate and show the TopBytes logo followed by a startup message

2.2 First Boot Sequence

When you power on the DX Spotter for the first time (or after a reset), the following will occur:

1. **Boot Screen:** The TopBytes name and "DX Spotter Starting..." message will display
2. **Network Check:** The device checks for saved WiFi credentials
3. **Configuration Mode:** Since no WiFi is configured, the device will automatically enter Configuration Mode

2.2.1 Configuration Mode Display

When in Configuration Mode, the display will show:

```
CONFIG MODE
WiFi SSID:
DXCluster AP

Open browser:
http://192.168.4.1
```

This indicates that the device has created its own WiFi access point and is ready for configuration.

2.3 Connecting to the Configuration Portal

2.3.1 Using a Computer or Mobile Device

1. Open WiFi Settings

On your computer, smartphone, or tablet, open the WiFi settings.

2. Find the Access Point

Look for a WiFi network named: DXCluster AP

3. Connect to the Network

- Select "DXCluster AP" from the available networks
- No password is required
- Your device will connect to the DX Spotter's access point

4. Open the Configuration Page

- Most devices will automatically open a captive portal
- If not, open a web browser and navigate to: <http://192.168.4.1>

Note: On some devices, you may see a notification that "This network has no internet connection." This is normal - the DX Spotter access point is only for configuration, not internet access.

2.4 Configuration Page Interface

Once connected, you'll see the DX Spotter configuration page with the following sections:

2.4.1 WiFi Configuration Section

WiFi Network (SSID)

Select your home WiFi network from the dropdown or enter it manually.

WiFi Password

Enter your WiFi password.

Warning: The password field will be blank when loading the page. If you're reconfiguring and don't want to change the password, you can leave this field blank to keep the existing password.

Scan Networks Button

Click to refresh the list of available WiFi networks.

2.4.2 DX Cluster Configuration Section

Cluster Host

The hostname or IP address of the DX cluster server.

Default: `dxc.g3lrs.org.uk`

Cluster Port

The TCP port for the cluster telnet connection.

Default: `7300`

Protocol

Currently only "TCP/Telnet" is supported.

Your Callsign

Your amateur radio callsign (required).

Important: You **must** enter a valid callsign. The device will not connect to the cluster if the callsign is blank or set to "NOCALL".

2.4.3 Display Configuration Section

Band Filter

Optional filter command to limit spots to specific bands.

Examples:

- `accept/spot 0 freq 20m` - Only 20 meter spots
- `accept/spot 0 freq 40m` - Only 40 meter spots
- Leave blank for all bands

Display Title

The title shown at the top of the display.

- If left blank, will auto-generate based on band filter (e.g., "20M", "40M")
- Custom titles can be entered (e.g., "My Station", "Field Day")

Scroll Interval (ms)

How long each spot is displayed before scrolling to the next.

- Default: `10000` (10 seconds)
- Minimum: `5000` (5 seconds)
- Maximum: `60000` (60 seconds)

Maximum Spots

How many spots to keep in the scrolling history.

- Default: 5
- Minimum: 1
- Maximum: 15

2.5 Basic Configuration Example

Here's a typical first-time configuration:

1. WiFi Settings

- SSID: MyHomeWiFi
- Password: MySecurePassword123

2. DX Cluster Settings

- Cluster Host: `dxc.g3lrs.org.uk` (default)
- Cluster Port: `7300` (default)
- Protocol: TCP/Telnet
- Callsign: K3ABC (your actual callsign)

3. Display Settings

- Band Filter: `accept/spot 0 freq 20m` (for 20 meters only)
- Display Title: (leave blank - will auto-generate as "20M")
- Scroll Interval: `10000` (10 seconds)
- Maximum Spots: 5

4. Save Configuration

Click the "Save Configuration" button at the bottom of the page.

2.6 Saving and Rebooting

2.6.1 After Clicking Save

1. The device will save all settings to non-volatile memory
2. If WiFi credentials changed, the device will display a confirmation message
3. The device will automatically reboot after 3 seconds
4. Your computer/phone will disconnect from the "DXCluster AP" network

Note: After saving, you can reconnect to your regular WiFi network.

2.6.2 Reconnecting to Your Network

After the DX Spotter reboots:

1. It will attempt to connect to the WiFi network you configured
2. The display will show connection progress
3. Once connected, it will connect to the DX cluster
4. Within a few seconds, you should see spots appearing on the display

2.7 Verifying Successful Setup

You'll know the setup was successful when:

- The display shows the WiFi signal strength indicator (top left)
- Your custom title or auto-generated band name appears (top center)
- The current time displays (top right)
- DX spots begin scrolling on the display

Example Display Layout:

```
[WiFi]           20M           12:34:56
-----
W1ABC           14.074 MHz
CQ DX FT8
```

2.8 Serial Monitor Messages

If you have the DX Spotter connected to a computer via USB serial, you can monitor the startup process:

```
DX Spotter Starting...
Attempting to connect to stored Wi-Fi: MyHomeWiFi
.....
Successfully connected!
IP Address: 192.168.1.100

Attempting to connect to DX Cluster: dxc.g3lrs.org.uk:7300
Telnet connected. Sending configuration commands...
Set Filter accept/spot 0 freq 20m

W1ABC 14.074 -> CQ DX FT8
```

2.9 What's Next?

Now that your DX Spotter is set up and running, you can:

- Learn more about configuration options in the *Configuration* section
- Understand display operation in the *Operation* section
- Customize band filters and display settings
- Set up OTA updates (see *Advanced Features* section)

If you encounter any issues during setup, refer to the *Troubleshooting* section.

CONFIGURATION

This section provides detailed information about all configuration options available for the DX Spotter.

3.1 Accessing Configuration After Initial Setup

3.1.1 Re-entering Configuration Mode

There are two ways to access the configuration interface after initial setup:

Method 1: Serial Reset Command

1. Connect the DX Spotter to your computer via USB
2. Open a serial terminal (115200 baud)
3. Power on the device
4. Within the first 2 seconds, send the letter R or r
5. The device will clear all settings and enter configuration mode

Method 2: While Connected to WiFi

If your DX Spotter is connected to your WiFi network:

1. Find the device's IP address from your router or serial monitor
2. Open a web browser
3. Navigate to the device's IP address (e.g., `http://192.168.1.100`)
4. The configuration page will load
5. Make changes and click "Save Configuration"

Note: When modifying settings while connected to WiFi, only cluster and display settings that change will trigger a reconnection. WiFi credential changes will trigger a reboot.

3.2 Device Information

3.2.1 Device ID (MAC Address)

At the top of the configuration page, you'll see the **Device ID**, which displays the device's MAC address.

Type

Read-only

Format

XX:XX:XX:XX:XX:XX (hexadecimal)

Example

A4:CF:12:34:56:78

Purpose:

- Uniquely identifies your DX Spotter hardware
- Useful for network troubleshooting
- Helpful when managing multiple devices
- Can be used for MAC address filtering on routers
- Permanent identifier that never changes

Note: The Device ID (MAC address) is hardware-based and cannot be changed. It is displayed for information purposes only.

3.3 WiFi Configuration Options

3.3.1 Multiple WiFi Networks

The DX Spotter supports up to **5 WiFi network credentials** with priority-based connection. This allows the device to automatically connect to the best available network based on your configured priority order.

How It Works:

1. **Priority Order:** Networks are tried in order from top to bottom (#1 has highest priority)
2. **Auto-Scan:** On boot, the device scans for available networks
3. **Smart Connection:** Connects to the highest-priority network that's available
4. **Seamless Roaming:** Automatically switches networks if you move between locations

Managing WiFi Networks:

- **Add Network:** Click the green "+ Add WiFi Network" button
- **Reorder Priority:** Drag and drop networks to change priority
- **Delete Network:** Click the red "Delete" button on any network
- **Network Scanner:** Use "Scan Available Networks" to discover and add networks

3.3.2 WiFi Network Configuration

Each WiFi network entry requires:

Network Name (SSID)

Type
String (1-32 characters)

Required
Yes

Example
MyHomeNetwork

The SSID (Service Set Identifier) of the WiFi network.

Password

Type
String (8-63 characters for WPA/WPA2, or blank for open networks)

Required
Only for secured networks

Example
MySecurePassword123

The password for the WiFi network.

Important: Password Field Behavior:

- When adding a new network: Enter the password
 - When editing existing networks: Leave blank to keep the existing password
 - The password field is always blank when loading the page for security
 - Only enter a new password if you want to change it
-

Network Scanner Integration:

1. Click "Scan Available Networks"
2. Available networks appear in a list with signal strength
3. Click any network to add it to your WiFi list
4. Enter the password for the selected network
5. Drag to adjust its priority position

Priority Indicators:

Each network shows its priority number (#1, #2, #3, etc.). Priority #1 is tried first, then #2, and so on.

3.4 DX Cluster Configuration Options

We have partnered with hamserve, <https://dxc.hamserve.uk> as the default DX Cluster to connect. Hamserve DX cluster is hosted in a data center with excellent bandwidth and uptime statistics, making it a great choice for receiving your DX Spots.

3.4.1 Cluster Selection

Type

Dropdown selector

Required

Yes

Default

HamServe G1FEF (dxc.hamserve.uk:7300)

The web configuration page provides a dropdown to select from built-in and custom DX cluster servers. Selecting a preset automatically fills in the cluster host and port.

Built-in Cluster Presets:

Name	Host	Port
HamServe G1FEF	dxc.hamserve.uk	7300
Rusty Cluster	dx2.g5gdx.com	7300
G3LRS UK	dxc.g3lrs.org.uk	7300
M0KGX	dx.m0kgx.com	7300
NC7J	dxc.nc7j.com	7373
Reverse Beacon Network	telnet.reversebeacon.net	7000

Note: Some DX cluster servers may require registration or have specific callsign validation requirements.

Custom Clusters

You can add up to **5 custom clusters** that appear alongside the built-in presets in the dropdown. Each custom cluster requires a name, hostname, and port.

Custom clusters are saved in non-volatile storage and persist across reboots and firmware updates.

3.4.2 Cluster Port

Type

Integer (1-65535)

Required

Yes

Default

7300

The TCP port is automatically set when selecting a cluster preset, but can also be edited manually. Most DX clusters use port 7300, but some may use different ports (like 23, 7373, 8000, etc.).

3.4.3 Protocol

Type	Selection
Required	Yes
Default	TCP/Telnet
Options	TCP/Telnet

Currently, only TCP/Telnet protocol is supported. This is the standard protocol used by most DX cluster networks.

Note: Future versions may support additional protocols such as MQTT or HTTP APIs.

3.4.4 Your Callsign

Type	String (Amateur Radio Callsign)
Required	Yes
Default	NOCALL
Example	K3ABC, G4XYZ, VK2ABC

Your amateur radio callsign. This is used to log in to the DX cluster.

Danger: Important Callsign Requirements:

- You **must** enter a valid amateur radio callsign
- The callsign cannot be blank or left as "NOCALL"
- If the callsign is not configured, the device **will not** attempt to connect to the cluster
- Use your own callsign - do not use someone else's callsign

Callsign Format:

- Standard callsign format (e.g., K3ABC, G4XYZ)
- Include portable/mobile indicators if desired (e.g., K3ABC/P)
- Case insensitive (will be sent as entered)

Important: Multiple DX Spotters:

If you have multiple DX Spotters, each one **must** use a unique callsign. DX clusters only allow one connection per callsign. If two devices use the same callsign, they will kick each other off in a reconnect loop.

Solution: Add a suffix to differentiate them:

- Device 1: K3ABC
- Device 2: K3ABC/2
- Device 3: K3ABC/3

- Or use indicators: K3ABC/P, K3ABC/M, K3ABC/S (Portable, Mobile, Station)
-

3.5 Display Configuration Options

3.5.1 Band Filter

Type

Dropdown selector + manual entry

Required

No (leave blank for all bands)

Default

All Bands (empty filter — all spots shown)

The web configuration page provides a dropdown to select from built-in and custom filter presets. Selecting a preset fills in the filter command, which is sent directly to the DX cluster after login.

Built-in Filter Presets:

Name	Filter Command
All Bands	(blank — no filter)
20M Only	accept/spot 0 freq 20m
40M Only	accept/spot 0 freq 40m
HF SSB	accept/spot 0 freq hf/ssb
HF CW	accept/spot 0 freq hf/cw

Custom Filters

You can add up to **5 custom filters** that appear alongside the built-in presets in the dropdown. Each custom filter requires a name and a filter command string.

Custom filters are saved in non-volatile storage and persist across reboots and firmware updates.

Advanced Filtering:

Some DX clusters support more advanced filtering. Refer to your cluster's documentation for specific syntax. Examples for custom filters:

- Frequency range: `accept/spot 0 freq 14.000-14.100`
- HF Phone: `accept/spot 0 freq hf/ssb`
- HF and 2M: `accept/spot 0 freq hf or freq 2m`
- Multiple bands: `accept/spot 0 freq 20m or freq 15m or freq 10m`

Tip: When you change the band filter, the display title will automatically update if you haven't customized it. For example, filtering to 20 meters will set the title to "20M".

3.5.2 Display Title

Type
String (up to ~20 characters recommended)

Required
No

Default
Auto-generated from band filter

Example
20M, Field Day, My Station

The title displayed at the top center of the display.

Auto-Generation Behavior:

If you leave the title blank or don't customize it:

- The device will automatically generate a title based on your band filter
- Filter for 20M = Title: "20M"
- Filter for 40M = Title: "40M"
- No filter = Title: "All Bands"

Custom Titles:

You can enter any custom title you want:

- Keep it short (20 characters or less recommended)
- Examples: "Contest", "Field Day", "DX Watch", "K3ABC"

Note: If you change the band filter and the title was auto-generated, the title will automatically update to match the new band. If you've customized the title, it will remain as you set it even when changing filters.

3.5.3 Scroll Interval

Type
Integer (milliseconds)

Required
Yes

Default
10000 (10 seconds)

Range
5000-60000

Example
15000 (15 seconds)

The time in milliseconds that each spot is displayed before scrolling to the next spot in the history.

Recommendations:

- **Fast Reading:** 5000-7000ms (5-7 seconds)
- **Standard:** 10000ms (10 seconds) - Default
- **Leisurely:** 15000-20000ms (15-20 seconds)
- **Very Slow:** 30000-60000ms (30-60 seconds)

Tip: If you're monitoring from across the room, use a longer scroll interval to give yourself time to read each spot.

3.5.4 Maximum Spots

Type	Integer
Required	Yes
Default	5
Range	1-15
Example	10

The maximum number of spots to keep in the scrolling history.

How It Works:

- New spots are added to the history
- The display scrolls through all spots in the history
- When the history is full, the oldest spot is removed when a new one arrives
- With more spots, you can see more history but it takes longer to cycle through

Recommendations:

- **Minimal History:** 1-3 spots - See only the most recent spots
- **Standard:** 5 spots (Default) - Good balance
- **More Context:** 10-15 spots - See more band activity history

3.5.5 Display Rotation

Type	Selection (0 or 180 degrees)
Required	Yes
Default	0 (Normal orientation)
Options	Normal (0 degrees) or Flipped (180 degrees)

The display rotation setting allows you to flip the display 180 degrees for upside-down mounting.

When to Use:

- **Normal (0 degrees):** Default orientation - use when device is mounted right-side up
- **Flipped (180 degrees):** Use when device is mounted upside-down or needs to be viewed from a different angle

Note: Display rotation is useful when:

- Mounting the device on a wall or shelf where cables need to exit from the top

- Placing the device in a location where upside-down viewing is more natural
-

3.5.6 Device Name

Type

String (alphanumeric and hyphens)

Required

No

Default

dxspotter

Range

1-32 characters

Example

shack-monitor, portable-dx, contest-spotter

The device name is used for network identification via DHCP hostname and mDNS (Multicast DNS).

Purpose:

- Identifies the device on your network
- Useful when running multiple DX Spotters
- Appears in router DHCP client lists
- Used for mDNS discovery

Naming Guidelines:

- Use only alphanumeric characters and hyphens
- Keep it descriptive but concise
- Examples:
 - dxspotter - Default, single device
 - shack-20m - 20 meter monitor in shack
 - portable - Portable operations spotter
 - contest - Contest monitoring device

Tip: If you have multiple DX Spotters on the same network, give each one a unique device name to easily identify them in your router's device list.

3.5.7 Timezone

Type

Selection (dropdown)

Required

Yes

Default

UTC

The timezone setting controls the time displayed on the DX Spotter's clock. Select your local timezone from the dropdown list.

Available Timezones:

Timezone	Description
UTC	Coordinated Universal Time (default)
London (GMT/BST)	United Kingdom with daylight saving
Paris (CET/CEST)	Central European Time with daylight saving
Berlin (CET/CEST)	Central European Time with daylight saving
Moscow (MSK)	Moscow Standard Time (no daylight saving)
Dubai (GST)	Gulf Standard Time (no daylight saving)
Mumbai (IST)	India Standard Time (no daylight saving)
Bangkok (ICT)	Indochina Time (no daylight saving)
Singapore (SGT)	Singapore Time (no daylight saving)
Hong Kong (HKT)	Hong Kong Time (no daylight saving)
Tokyo (JST)	Japan Standard Time (no daylight saving)
Sydney (AEST/AEDT)	Australian Eastern Time with daylight saving
Auckland (NZST/NZDT)	New Zealand Time with daylight saving
US Eastern (EST/EDT)	Eastern Time with daylight saving
US Central (CST/CDT)	Central Time with daylight saving
US Mountain (MST/MDT)	Mountain Time with daylight saving
US Pacific (PST/PDT)	Pacific Time with daylight saving
Alaska (AKST/AKDT)	Alaska Time with daylight saving
Hawaii (HST)	Hawaii Standard Time (no daylight saving)
Sao Paulo (BRT/BRST)	Brasilia Time with daylight saving

Note: Timezones with daylight saving time (DST) will automatically adjust when DST begins and ends. The time is synchronized via NTP (Network Time Protocol) servers.

3.5.8 Factory Reset

The configuration page includes a **Factory Reset** button that erases all settings and restores the device to factory defaults.

What Gets Erased:

- WiFi credentials (SSID and password)
- DX cluster settings (host, port, protocol)
- Callsign
- Band filter
- Display title
- Device name
- Timezone
- Scroll interval
- Maximum spots setting
- Display rotation

How to Perform Factory Reset:

1. Access the configuration web page
2. Scroll to the bottom
3. Click the red "**Factory Reset**" button
4. Confirm when prompted

5. Device will erase all settings and reboot
6. After reboot, device creates "DXCluster AP" access point
7. Reconfigure from scratch

Warning: Factory reset cannot be undone! Make note of your current settings before performing a factory reset.

Note: Factory reset is useful when:

- Selling or giving away the device
 - Starting fresh with new configuration
 - Troubleshooting persistent configuration issues
 - Moving device to a completely different network/cluster setup
-

3.6 Configuration Examples

3.6.1 Example 1: 20 Meter Monitor

Use Case: Monitor only 20 meter activity at your home station.

Configuration:

```
WiFi SSID: HomeNetwork
WiFi Password: *****
Cluster Host: dxc.hamserve.uk
Cluster Port: 7300
Protocol: TCP/Telnet
Callsign: K3ABC
Band Filter: accept/spot 0 freq 20m
Display Title: (blank - auto-generates to "20M")
Device Name: dxspotter
Timezone: US Eastern (EST/EDT)
Scroll Interval: 10000
Maximum Spots: 5
Display Rotation: Normal (0 degrees)
```

3.6.2 Example 2: All Bands DX Hunter

Use Case: Monitor all bands to catch any DX openings.

Configuration:

```
WiFi SSID: HomeNetwork
WiFi Password: *****
Cluster Host: dxc.hamserve.uk
Cluster Port: 7300
Protocol: TCP/Telnet
Callsign: G4XYZ
Band Filter: (blank - all bands)
Display Title: DX Hunter
```

(continues on next page)

(continued from previous page)

```
Device Name: shack-monitor
Timezone: London (GMT/BST)
Scroll Interval: 8000
Maximum Spots: 10
Display Rotation: Normal (0 degrees)
```

3.6.3 Example 3: Field Day Portable

Use Case: Portable operation at Field Day, focusing on 40 meters.

Configuration:

```
WiFi SSID: FieldDay2025
WiFi Password: *****
Cluster Host: dxc.k3lr.com
Cluster Port: 7373
Protocol: TCP/Telnet
Callsign: W1ABC/P
Band Filter: accept/spot 0 freq 40m
Display Title: Field Day
Device Name: portable
Timezone: US Eastern (EST/EDT)
Scroll Interval: 12000
Maximum Spots: 7
Display Rotation: Normal (0 degrees)
```

3.6.4 Example 4: Multiple DX Spotters (Multi-Band Station)

Use Case: Running 3 DX Spotters simultaneously, each monitoring a different band.

Device 1 - 20 Meter Monitor:

Configuration:

```
WiFi SSID: HomeNetwork
WiFi Password: *****
Cluster Host: dxc.hamserve.uk
Cluster Port: 7300
Protocol: TCP/Telnet
Callsign: K3ABC
Band Filter: accept/spot 0 freq 20m
Display Title: 20M
Device Name: dxspotter-20m
Timezone: US Eastern (EST/EDT)
Scroll Interval: 10000
Maximum Spots: 5
Display Rotation: Normal (0 degrees)
```

Device 2 - 15 Meter Monitor:

Configuration:

```
WiFi SSID: HomeNetwork
WiFi Password: *****
Cluster Host: dxc.hamserve.uk
Cluster Port: 7300
```

(continues on next page)

(continued from previous page)

```
Protocol: TCP/Telnet
Callsign: K3ABC/2
Band Filter: accept/spot 0 freq 15m
Display Title: 15M
Device Name: dxspotter-15m
Timezone: US Eastern (EST/EDT)
Scroll Interval: 10000
Maximum Spots: 5
Display Rotation: Normal (0 degrees)
```

Device 3 - 10 Meter Monitor:

Configuration:

```
WiFi SSID: HomeNetwork
WiFi Password: *****
Cluster Host: dxc.hamserve.uk
Cluster Port: 7300
Protocol: TCP/Telnet
Callsign: K3ABC/3
Band Filter: accept/spot 0 freq 10m
Display Title: 10M
Device Name: dxspotter-10m
Timezone: US Eastern (EST/EDT)
Scroll Interval: 10000
Maximum Spots: 5
Display Rotation: Normal (0 degrees)
```

Note: Notice how each device uses a unique:

- **Callsign:** K3ABC, K3ABC/2, K3ABC/3 (prevents duplicate login)
- **Device Name:** dxspotter-20m, dxspotter-15m, dxspotter-10m (easy network identification)
- **Band Filter:** Different band for each monitor

3.6.5 Example 5: Contest Station

Use Case: Multi-band contest operation with quick updates.

Configuration:

```
WiFi SSID: ContestWiFi
WiFi Password: *****
Cluster Host: wa9pie.net
Cluster Port: 7300
Protocol: TCP/Telnet
Callsign: K3LR
Band Filter: (blank - all bands)
Display Title: Contest
Device Name: contest
Timezone: US Eastern (EST/EDT)
Scroll Interval: 5000
Maximum Spots: 15
Display Rotation: Normal (0 degrees)
```

3.7 Saving Configuration Changes

After making any configuration changes:

1. **Review Your Settings**

Double-check all fields before saving.

2. **Click "Save Configuration"**

The button is at the bottom of the configuration page.

3. **Wait for Confirmation**

You'll see a success message or confirmation.

4. **Automatic Behavior**

- If WiFi credentials changed: Device will reboot in 3 seconds
- If only cluster/display settings changed: Device will reconnect without rebooting
- Spot history will be cleared if the band filter changed

5. **Verify Operation**

After saving, verify that:

- WiFi reconnects successfully
- DX cluster connection is established
- Spots begin appearing with your new settings

3.8 Configuration Backup

The DX Spotter stores all configuration in the ESP32's non-volatile storage (NVS). This means:

- Settings persist through power cycles
- No battery needed to maintain configuration
- Settings survive firmware updates (in most cases)

Note: If you perform a factory reset or send the serial R command, all settings will be erased and the device will return to initial configuration mode.

3.9 What's Next?

Now that you understand all configuration options, learn about:

- Daily operation in the *Operation* section
- Solving common issues in the *Troubleshooting* section
- Advanced features like OTA updates in the *Advanced Features* section

OPERATION

This section covers the day-to-day operation of your DX Spotter device.

4.1 Understanding the Display

4.1.1 Display Layout

The DX Spotter uses a 256x64 pixel yellow OLED display with the following layout:

[WiFi Icon]	Display Title	HH:MM:SS

SPOTTED_CALL	Frequency MHz	
@ HH:MM		
DE SpotterCall Comment text here		

Let's break down each element:

Status Line (Top Row)

WiFi Signal Indicator (Top Left)

The WiFi icon shows your connection strength:

- **4 Bars** (strongest): Excellent signal (75-100%)
- **3 Bars**: Good signal (50-74%)
- **No Connection Icon**: WiFi disconnected (0%)

The signal strength is calculated from your RSSI (Received Signal Strength Indicator).

Display Title (Top Center)

- Shows your configured title or auto-generated band name
- Examples: "20M", "All Bands", "Field Day", "K3ABC"
- Centered on the display

Time (Top Right)

- Current time in HH:MM:SS format (24-hour)
- Automatically synchronized via NTP (Network Time Protocol)
- Updates every second

Separator Line

A horizontal line separates the status area from the spot content.

Spot Content Area

Each spot displays the following information:

Line 1: Callsign and Frequency

- **Left side:** The spotted callsign (large, bold font)
- **Right side:** Frequency in MHz

Example:

```
W1ABC           14.074 MHz
```

Line 2: Spot Time

- Shows the time the spot was reported, converted to your configured local timezone
- Prefixed with "@" symbol
- Displayed in a small font above the spotter line
- Aligned with the start of the spotter callsign

Example:

```
@ 16:30
```

Line 3: Spotter and Comment

- **"DE" label:** Small font prefix indicating the spotter
- **Spotter callsign:** The callsign of the station that reported the spot
- **Vertical separator:** A line between the spotter and comment
- **Comment:** Scrolling text with the spotter's comment (e.g., "CQ DX", "FT8", "599 in OH")
- Anchored to the bottom of the display area

Example:

```
DE N4XYZ | CQ DX FT8
```

4.2 Normal Operation

4.2.1 Power On Sequence

When you power on the DX Spotter:

1. **Boot Screen** (2 seconds)

```
TopBytes Ltd  
DX Spotter Starting...  
WiFi (YourSSID)
```

2. **Network Connection** (5-30 seconds)

The device connects to your configured WiFi network.

3. **Cluster Connection** (2-5 seconds)

The device connects to the DX cluster and sends your login and filter commands.

4. **Normal Operation**

Spots begin appearing on the display.

4.2.2 Spot Display Behavior

When First Connected:

- The display shows "Waiting for spots..." until the first spot arrives
- This is normal and may take a few seconds to a few minutes depending on band activity

As Spots Arrive:

- New spots are added to the history
- The display scrolls through spots in the history
- Each spot is displayed for the configured scroll interval (default 10 seconds)

Scrolling Animation:

- Spots smoothly scroll upward during the last 500ms of the display interval
- The animation creates a fluid transition between spots
- The next spot slides up from the bottom as the current spot slides up and off the top

Spot History:

- The device maintains a history of recent spots (default 5, max 15)
- New spots are inserted after the currently displayed spot
- Oldest spots are removed when the history reaches the maximum size

4.3 Understanding Spot Information

4.3.1 DX Spot Format

DX clusters transmit spots in a standard format. The DX Spotter parses these lines and extracts:

Raw Cluster Format:

```
DX de N4XYZ: 14.074 K3ABC CQ DX FT8 15:30Z
```

Parsed Display Format:

```
K3ABC           14.074 MHz
                @ 16:30
DE N4XYZ | CQ DX FT8
```

Information Extracted:

- **Spotted Callsign:** K3ABC (displayed large on Line 1)
- **Frequency:** 14.074 MHz (displayed on Line 1 right)
- **Time:** 15:30Z (converted to local timezone and displayed on Line 2)
- **Spotter Callsign:** N4XYZ (displayed on Line 3 with "DE" prefix)
- **Comment:** CQ DX FT8 (scrolling on Line 3 after spotter callsign)

4.3.2 Common Comment Meanings

Here are some common comments you'll see:

General Activity:

- CQ - Station is calling CQ (seeking any contact)
- CQ DX - Station is calling for DX contacts
- CQ CONTEST - Station is in a contest

Digital Modes:

- FT8 - Operating FT8 mode
- FT4 - Operating FT4 mode
- RTTY - Radio teletype mode
- PSK31 - Phase shift keying mode

CW (Morse Code):

- CW - Morse code operation
- QRS - Sending slowly (for new operators)

Special Operations:

- DXpedition - Special DX expedition operation
- IOTA - Islands On The Air program
- POTA - Parks On The Air activation

Signal Reports:

- 599 - Perfect signal report (very strong)
- 579 - Strong signal
- Numbers indicate signal strength (5), readability (9), tone (9)

4.4 WiFi Connection Status

4.4.1 Connection Indicators

Connected:

- WiFi icon shows bars in top left
- Time updates every second
- Spots are received and displayed

Disconnected:

- WiFi icon shows disconnected symbol
- Time may stop updating
- Spots stop arriving
- Device will attempt automatic reconnection

4.4.2 Automatic Reconnection

If the WiFi connection is lost:

1. The device detects the disconnection
2. "WiFi disconnected. Attempting to reconnect..." message in serial log
3. Device waits 5 seconds
4. Attempts to reconnect using saved credentials
5. If successful, reconnects to DX cluster
6. Spot display resumes

Note: The spot history is maintained during reconnection, so you won't lose your recently displayed spots.

4.5 DX Cluster Connection Status

4.5.1 Connection States

Connecting:

- Device attempts to establish telnet connection
- Serial log shows: "Attempting to connect to DX Cluster: [host]:[port]"

Connected:

- Spots are received and displayed
- Serial log shows parsed spot information

Disconnected:

- If cluster connection fails or drops
- Serial log shows: "Telnet connection failed. Retrying in 30 seconds."
- Device automatically retries connection every 30 seconds

4.5.2 Callsign Validation

Danger: Callsign Requirement

The device will **not** connect to the DX cluster if:

- Your callsign is blank/empty
- Your callsign is set to "NOCALL"

If you see no spots and the serial log shows "Cannot connect to cluster: Callsign not configured", you need to enter your callsign in the configuration.

4.5.3 Cluster Messages

Occasionally, you may see non-spot messages from the cluster in the serial log:

- Welcome messages
- Login confirmation
- Filter acknowledgment
- System announcements

These are logged but not displayed on the screen. Only valid DX spots are shown on the display.

4.6 Serial Monitor Operation

4.6.1 Connecting via Serial

If you want to see detailed operational information:

1. Connect the DX Spotter to your computer via USB
2. Open a serial terminal (Arduino IDE, PuTTY, screen, etc.)
3. Set baud rate to: **115200**
4. You'll see real-time operational messages

4.6.2 Serial CLI Commands

The DX Spotter includes a serial CLI for headless management. After boot, type `help` to see available commands:

```
=== DXSpotter CLI ===
help    - Show this help
show    - Show current settings
reboot  - Restart device
reset   - Factory reset (clear settings + reboot)
upgrade - Start OTA firmware update
=====
```

Use the `show` command to view all settings and live connection status without needing a web browser. For a full reference, see [Advanced Features](#).

4.6.3 Serial Output Examples

Startup:

```
DX Spotter Starting...
Attempting to connect to stored Wi-Fi: HomeNetwork
.....
Successfully connected!
IP Address: 192.168.1.100
Time configured with GMT/BST (Daylight Saving) adjustment.
London Time: Wednesday, June 25 2025 14:32:18 (BST)
Web server started on port 80
Type 'help' for serial CLI commands.
```

Cluster Connection:

```
Attempting to connect to DX Cluster: dxc.g3lrs.org.uk:7300
Telnet connected. Sending configuration commands...
Set Filter accept/spot 0 freq 20m
CLUSTER MSG: Welcome to G3LRS DX Cluster
```

Spot Reception:

```
W1ABC 14.074 -> CQ DX FT8
K3DEF 14.244 -> CQ CONTEST
G4XYZ 14.195 -> 599 IN OH
```

Errors/Issues:

```
Cannot connect to cluster: Callsign not configured (blank or NOCALL).
Telnet connection failed. Retrying in 30 seconds.
WiFi disconnected. Attempting to reconnect...
```

4.7 Daily Usage Tips

4.7.1 Optimal Viewing Distance

- The display is easily readable from 1-3 meters (3-10 feet)
- High contrast ensures visibility in various lighting conditions
- No backlight adjustment needed - OLED pixels emit their own light

4.7.2 Power Considerations

Continuous Operation:

- The DX Spotter can run 24/7 if desired
- Power consumption is low (typically <1W)
- No harm from continuous operation

Portable Use:

- Compatible with USB power banks
- A 10,000 mAh power bank can power the device for 40+ hours
- Perfect for field day, portable operations, or camping

Power Cycling:

- Safe to power on/off as needed
- Settings are stored in non-volatile memory
- No initialization needed after power cycling

4.7.3 Band Activity Monitoring

Best Practices:

- Set band filters to match your operating interests
- Use longer scroll intervals if monitoring from across the room
- Increase max spots to see more history during busy periods
- Use shorter scroll intervals during contests for rapid updates

Understanding Activity Levels:

- **High Activity:** New spots every few seconds (contests, good conditions)
- **Moderate Activity:** New spots every 1-2 minutes
- **Low Activity:** Sporadic spots, may wait several minutes
- **No Activity:** Either band is closed or filter is too restrictive

4.8 Placement Recommendations

Ideal Locations:

- On your operating desk within easy view
- Shelf near your radio equipment
- Wall-mounted near your station (if mounting holes provided)

Avoid:

- Direct sunlight (can wash out display)
- Extreme temperatures (below 0C or above 40C)
- High humidity environments
- Areas with poor WiFi signal

Display Orientation:

- The DX Spotter supports display rotation for upside-down mounting
- Configure rotation in the web interface: Normal (0 degrees) or Flipped (180 degrees)
- Useful when mounting with cables exiting from the top
- No need to physically flip the device - software rotation handles the display

4.9 Typical Operating Scenarios

4.9.1 Scenario 1: Morning Band Check

Power on your DX Spotter while having your morning coffee:

1. Device boots and connects automatically
2. Watch for spots indicating which bands are "open"
3. If you see activity on 20M, head to your radio
4. Use the spotted frequency as a starting point

4.9.2 Scenario 2: Contest Monitoring

During a contest weekend:

1. Configure for "all bands" or your contest band of choice
2. Set scroll interval to 5-7 seconds for rapid updates
3. Increase max spots to 15 to see more activity
4. Watch for multipliers or rare stations
5. Note frequencies where activity is concentrated

4.9.3 Scenario 3: Background Monitoring

Keep it running while doing other activities:

1. Set longer scroll interval (15-20 seconds)
2. Glance at display periodically
3. If an interesting callsign or rare DX appears, head to your radio
4. Device maintains history so you can review recent spots

4.9.4 Scenario 4: Learning Tool

For new hams learning about band activity:

1. Set to "all bands" mode
2. Observe which bands are active at different times of day
3. Learn about propagation patterns
4. Note peak activity times for different bands
5. Understand how solar conditions affect band openings

4.10 What's Next?

- If you encounter any issues, see *Troubleshooting*
- For advanced features like OTA updates, see *Advanced Features*
- For technical specifications, see *Technical Specifications*

TROUBLESHOOTING

This section provides solutions to common issues you may encounter with your DX Spotter.

5.1 Quick Diagnostic Checklist

Before diving into specific issues, run through this quick checklist:

- Is the device powered on? (Display should be lit)
- Is the USB cable securely connected?
- Is your WiFi network working? (Test with another device)
- Is your callsign configured? (Not blank or "NOCALL")
- Is the DX cluster server online and accessible?
- Have you checked the serial monitor for error messages?

5.2 WiFi Connection Issues

5.2.1 Issue: Cannot Connect to WiFi Network

Symptoms:

- Device creates "DXCluster AP" access point instead of connecting
- Display shows "CONFIG MODE"
- Status LED behavior indicates no connection

Possible Causes and Solutions:

1. Incorrect WiFi Password

Solution

- Re-enter configuration mode
- Verify your WiFi password (check for typos, case sensitivity)
- Make sure you're entering the correct password for the selected network
- Save configuration and reboot

2. WiFi Network Out of Range

Solution

- Move the DX Spotter closer to your WiFi router/access point
- Check WiFi signal strength from the installation location

- Consider using a WiFi extender if needed
- Verify the network is 2.4GHz (ESP32 does not support 5GHz WiFi)

3. WiFi Network Issues

Solution

- Verify your WiFi router is functioning
- Reboot your WiFi router
- Check if other devices can connect to the network
- Verify the network is not hidden (or configure SSID manually if it is)
- Check if MAC address filtering is enabled (add DX Spotter's MAC if needed)

4. Special Characters in SSID or Password

Solution

- Avoid special characters like ', ", or \ in your WiFi password
- If your SSID has special characters, try entering it manually
- Consider creating a guest network with a simpler name if issues persist

5.2.2 Issue: WiFi Keeps Disconnecting

Symptoms:

- WiFi icon shows disconnected
- Spots stop arriving
- Serial log shows repeated reconnection attempts

Solutions:

1. Weak Signal Strength

Solution

- Check the WiFi signal icon on the display
- Move the device closer to your router
- Reduce obstacles between the device and router
- Use a WiFi extender or access point closer to the device

2. Router Power Saving

Solution

- Some routers disconnect idle clients
- Disable power-saving features for IoT devices
- Set router to always allow the DX Spotter's MAC address

3. Network Congestion

Solution

- If on a busy 2.4GHz network, try changing the WiFi channel
- Reduce the number of devices on the network
- Use a dedicated IoT network if available

4. DHCP Lease Issues

Solution

- Assign a static IP address to the DX Spotter in your router
- Increase DHCP lease time in router settings

5.2.3 Issue: Cannot Access Configuration Page

Symptoms:

- Cannot navigate to <http://192.168.4.1>
- Browser times out
- "No internet connection" warnings

Solutions:

1. Not Connected to DXCluster AP

Solution

- Verify you're connected to the "DXCluster AP" network
- Disconnect from your regular WiFi first
- Some devices won't connect to networks without internet - temporarily disable "auto-switch" features

2. Captive Portal Not Appearing

Solution

- Manually open a browser
- Navigate to: <http://192.168.4.1>
- Try a different browser
- Clear browser cache if page doesn't load

3. Device Already Connected to Regular WiFi

Solution

- The configuration AP only starts if no WiFi is configured
- Use the device's IP address on your network instead
- Or reset the device using serial command R to force config mode

5.3 DX Cluster Connection Issues

5.3.1 Issue: No Spots Appearing

Symptoms:

- Display shows "Waiting for spots..."
- WiFi is connected (icon shows bars)
- Time updates correctly
- No spots ever appear

Possible Causes and Solutions:

1. Callsign Not Configured

Solution

- **Most Common Cause!**

- Check serial monitor for: "Cannot connect to cluster: Callsign not configured"
- Enter configuration mode
- Set your callsign (must not be blank or "NOCALL")
- Save and restart

2. DX Cluster Server Down

Solution

- Check if the cluster server is online
- Try accessing the cluster from a computer using telnet: `telnet dxc.g3lrs.org.uk 7300`
- Try a different cluster server
- Check cluster website for maintenance announcements

3. Incorrect Cluster Port

Solution

- Verify the correct port for your chosen cluster
- Common ports: 7300, 23, 7373, 8000
- Check cluster documentation
- Reconfigure with correct port number

4. Cluster Requires Registration

Solution

- Some clusters require callsign registration
- Register your callsign on the cluster website
- Wait for activation email
- Try connecting again

5. Filter Too Restrictive

Solution

- Your band filter might be excluding all spots
- Temporarily remove band filter (set to blank)
- Try with "all bands" mode
- If spots appear, adjust your filter
- Check filter syntax with cluster documentation

6. Band Inactive

Solution

- The filtered band may have no activity
- This is normal during poor propagation
- Try a different band filter
- Wait for better band conditions
- Check with "all bands" mode to verify cluster connection

7. Invalid Filter Command

Symptoms

- Display shows "Filter Error" message
- Error message from cluster shown on screen
- Spots not appearing

Solution

- **New in v1.0.4:** Filter errors are now automatically detected and displayed
- Read the error message shown on the OLED display
- Common errors include:
 - Invalid syntax (typos in filter command)
 - Unsupported filter features on your cluster
 - Special characters not recognized
- Access configuration page to correct the filter
- Try testing the filter via telnet first (see Advanced section)
- Leave filter blank to use all bands while troubleshooting
- Check cluster documentation for correct filter syntax

8. Duplicate Login / Reconnect Loop

Symptoms

- Display shows "Duplicate Login" error
- Message: "Another device using this callsign!"
- Device does NOT reconnect automatically
- Serial monitor shows "DUPLICATE LOGIN DETECTED"

Cause

- **Most Common:** Multiple DX Spotters configured with the same callsign
- Another device on your network using your callsign
- You're logged into the cluster from another computer/app

Solution

- **New in v1.0.4:** Duplicate logins are automatically detected and prevent reconnect loops
- DX clusters only allow **one connection per callsign** at a time
- When a second device connects, it kicks off the first device
- Options:

Option 1: Use Different Callsigns

- Configure each device with a unique identifier
- Examples: K3ABC, K3ABC/2, K3ABC/3
- Add portable indicators: K3ABC/P, K3ABC/M
- This is the **recommended solution**

Option 2: Disconnect Other Device

- Find and disconnect the other device using your callsign
- Power off or reconfigure the other DX Spotter
- Close any telnet sessions to the cluster

Option 3: Save Configuration to Retry

- After fixing the callsign conflict, simply save the configuration
- The device will automatically reset error flags and attempt to reconnect
- **Recommended:** This is the easiest recovery method
- Or power cycle the device if you prefer

Tip: Quick Recovery: After changing the callsign to fix the conflict, just click "Save & Reboot" or "Save" and the device will automatically retry the connection with the new callsign.

Warning: When duplicate login is detected, the device will **NOT** automatically reconnect to prevent a reconnect battle. You must resolve the conflict and save the new configuration (or power cycle) to retry.

5.3.2 Issue: Spots Appear Then Stop

Symptoms:

- Spots appeared initially
- Now stuck on one spot or shows "Waiting for spots..."
- WiFi still connected

Solutions:

1. Cluster Disconnected

Solution

- Check serial monitor for disconnection messages
- Wait 30 seconds for automatic reconnection attempt
- Power cycle the device
- Try a different cluster server

2. Network Timeout

Solution

- Telnet connection may have timed out
- Device will automatically reconnect
- If issue persists, reboot device
- Check for network stability issues

5.4 Display Issues

5.4.1 Issue: Display is Blank/Dark

Symptoms:

- Display is completely black
- No startup logo or text appears
- Device appears to be powered on

Solutions:

1. Power Supply Issue

Solution

- Verify USB cable is fully connected
- Try a different USB power adapter
- Ensure power adapter provides at least 500mA
- Try a different USB cable

5.4.2 Issue: Display Shows Garbled Text

Symptoms:

- Text is unreadable
- Strange characters or symbols
- Partial display corruption

Solutions:

1. Reset the Device

Solution

- Power cycle the device
- Clear configuration and reconfigure
- Update firmware if available

5.5 Configuration Issues

5.5.1 Issue: Forgot WiFi Password

Symptoms:

- Changed WiFi password on router
- DX Spotter still has old password
- Can't connect to device to update password

Solutions:

1. Temporarily Restore Old WiFi Password

Solution

- Temporarily change your router back to old password
- DX Spotter will connect
- Access configuration page via device IP
- Update to new password
- Change router back to new password
- Reboot DX Spotter

5.5.2 Issue: Can't Remember Device IP Address

Symptoms:

- Device is connected to WiFi
- Need to access configuration page
- Don't know the IP address

Solutions:

1. Check Router's DHCP Client List

Solution

- Log in to your WiFi router admin page
- Look for connected devices or DHCP clients
- Find device named "dxspotter"
- Note the IP address

2. Use Serial CLI

Solution

- Connect device via USB
- Open serial terminal at 115200 baud
- Type `show` to display all settings including current IP address
- Or power on the device and watch for "IP Address: x.x.x.x" during startup

3. Use Network Scanner

Solution

- Use a network scanning app (e.g., Fing, Advanced IP Scanner)
- Scan your network for ESP32 devices
- Identify by MAC address or device name

4. Force Config Mode

Solution

- Type `reset` in the serial CLI (works any time), or send `R` during the first 2 seconds of boot
- Device will clear all settings and create "DXCluster AP" access point
- Connect to <http://192.168.4.1>
- Reconfigure (existing password can be left blank to keep it)

5. Factory Reset (v1.0.4+)

Solution

- Access the configuration web page
- Scroll to bottom and click red "Factory Reset" button
- Confirm the reset when prompted
- All settings will be erased and device will reboot
- Device creates "DXCluster AP" for fresh configuration

Note: Factory reset is useful when you want to completely start over or if you're experiencing persistent configuration issues that other troubleshooting hasn't resolved.

5.6 Serial Monitor Issues

5.6.1 Issue: No Serial Output

Symptoms:

- Serial monitor connected
- No messages appearing

Solutions:

1. Wrong Baud Rate

Solution

- Set baud rate to exactly **115200**
- Check serial port settings

2. Wrong Serial Port

Solution

- Verify correct COM port selected (Windows)
- Check `/dev/tty*` devices (Mac/Linux)
- Disconnect/reconnect USB to identify port

4. USB Cable

Solution

- Some USB cables are power-only (no data lines)
- Try a different USB cable
- Use a cable known to work for data

5.7 Getting Help

5.7.1 Self-Help Resources

Before contacting support:

1. Check Serial Monitor

The serial output often contains valuable diagnostic information.

2. Review Documentation

Re-read relevant sections of this manual.

3. Try Factory Reset

Many issues can be resolved with a configuration reset.

4. Test with Different Settings

Try different cluster servers, remove filters, etc.

5.7.2 Gathering Information for Support

If you need to contact support, please gather:

- **Device Information**
 - Firmware version (from device or documentation)
 - MAC address (from serial monitor)
 - Hardware revision (if known)
- **Configuration Details**
 - WiFi network type (2.4GHz, security type)
 - DX cluster server and port you're trying to use
 - Band filter configuration
 - Your callsign (if comfortable sharing)
- **Problem Description**
 - What were you doing when the issue occurred?
 - What did you expect to happen?
 - What actually happened?
 - Is it consistent or intermittent?
- **Serial Monitor Log**
 - Copy/paste relevant serial output
 - Include startup messages
 - Include any error messages
- **Troubleshooting Already Attempted**
 - List what you've already tried
 - Note if anything temporarily worked

5.7.3 Contact Support

For additional assistance:

- **Website:** <https://www.topbytes.net>
- **Product Page:** <https://dxspotter.topbytes.net>
- **Email:** support@topbytes.net (check website for current contact)

When contacting support, include all information gathered above and any serial monitor logs that may be relevant.

5.8 Advanced Diagnostics

5.8.1 Telnet Cluster Test

To verify the cluster connection independently:

1. **From Windows:**

```
telnet dxc.g31rs.org.uk 7300
```

2. **From Mac/Linux:**

```
telnet dxc.g3lrs.org.uk 7300
```

3. **Expected Result:**

You should see a welcome message from the cluster.

4. **Login:**

Type your callsign and press Enter.

5. **Test Filter:**

Type your filter command (e.g., `accept/spot 0 freq 20m`)

6. **Watch Spots:**

If spots appear, the cluster is working and the issue is with your DX Spotter configuration.

5.8.2 Network Connectivity Test

To verify your DX Spotter can reach the cluster:

1. Find your DX Spotter's IP address
2. From a computer on the same network:

```
ping [DX_SPOTTER_IP]
```

3. If ping succeeds, network is working
4. Try pinging the cluster server:

```
ping dxc.g3lrs.org.uk
```

5. If cluster ping fails, your network may be blocking outbound telnet connections

5.9 Common Error Messages

5.9.1 Understanding Serial Error Messages

Here's a quick reference for common serial monitor messages:

Message	Meaning
Cannot start Telnet: WiFi not connected	WiFi connection lost or not established
Cannot connect to cluster: Callsign not configured (blank or NOCALL)	You must set a valid callsign in configuration
Telnet connection failed. Retrying in 30 seconds	Cannot reach DX cluster server
WiFi disconnected. Attempting to reconnect...	WiFi connection dropped, auto-recovery in progress
Invalid SSID length	WiFi SSID must be 1-32 characters
Password must be at least 8 characters	WPA/WPA2 passwords must be 8+ characters
Connection failed after 30 seconds	Could not connect to WiFi (wrong password or out of range)

5.10 Emergency Recovery

Should the Over The Air (OTA) firmware update fail and the system stops to function, it's possible to recover the system directly.

You will need a micro USB to USB cable (make sure it's one which provides data not just power). Plug the DX Spotter into your computer.

Note: You need to use the Chrome web browser to perform the upgrade

Click on the "Connect" button above and select the USB port associated with your Morse Trainer

ADVANCED FEATURES

This section covers advanced features and configuration options for experienced users.

6.1 Over-The-Air (OTA) Firmware Updates

The DX Spotter supports Over-The-Air firmware updates, allowing you to upgrade to new firmware versions without connecting to a computer.

6.1.1 How OTA Updates Work

The DX Spotter uses an HTTPS-based OTA update system:

1. Device connects to the TopBytes update server via HTTPS
2. Server checks device MAC address and current firmware version
3. If an update is available, it's downloaded and installed
4. Device automatically reboots with new firmware
5. Existing configuration is preserved (in most cases)

6.1.2 Security Features

- **HTTPS/TLS Encryption:** Updates are downloaded over encrypted connections
- **Certificate Validation:** Server certificate is validated against trusted CA
- **MAC Address Identification:** Each device is uniquely identified

Warning: Never interrupt power during a firmware update! Wait for the update to complete and the device to reboot.

6.1.3 Initiating an OTA Update

Via Web Interface

1. **Access Configuration Page**
 - Connect to your WiFi network
 - Navigate to the device's IP address in a browser
 - Or connect to "DXCluster AP" and go to <http://192.168.4.1>
2. **Click OTA Update Button**

- Look for the "OTA Update Mode" button
 - Click to initiate the update process
3. **Wait for Update**
 - The device will display update progress
 - Serial monitor will show download progress
 - Do not power off during this time!
 4. **Automatic Reboot**
 - Device will reboot automatically when complete
 - Normal operation will resume with new firmware

6.1.4 Troubleshooting OTA Updates

Update Fails to Start:

- Verify WiFi connection
- Check internet connectivity
- Ensure update server is reachable
- Check serial monitor for error messages

Update Stalls/Freezes:

- Wait at least 5 minutes before taking action
- Check network stability
- If completely frozen, power cycle and retry
- Contact support if problem persists

Update Completes but Device Won't Boot:

- Power cycle the device
- Try OTA update again
- If issue persists, may need to reflash via USB

6.2 Advanced WiFi Configuration

6.2.1 Static IP Address

By default, the DX Spotter uses DHCP to obtain an IP address. For a static IP:

Via Router:

1. Access your router's DHCP settings
2. Find the DX Spotter in the client list
3. Assign a "DHCP reservation" or "static lease" to its MAC address
4. This gives it the same IP address every time

6.2.2 Hidden WiFi Networks

If your WiFi network SSID is hidden:

1. Enter configuration mode
2. Manually type your SSID (don't use the dropdown)
3. Enter your password
4. Save configuration
5. Device will connect even though the network doesn't broadcast

6.3 Advanced Display Customization

6.3.1 Scroll Timing Adjustments

The scroll interval can be fine-tuned for optimal viewing:

Short Intervals (5-7 seconds):

- Pros: Rapid updates, see more spots quickly
- Cons: Hard to read from distance, may miss spots
- Best for: Contests, close-up monitoring

Medium Intervals (10-15 seconds):

- Pros: Balanced reading time
- Cons: None significant
- Best for: General use, moderate distance

Long Intervals (20-60 seconds):

- Pros: Easy to read from across room, no rush
- Cons: Slower updates, may miss recent spots
- Best for: Background monitoring, learning

6.3.2 Spot History Size

Adjusting maximum spots changes the behavior:

Small History (1-3 spots):

- Only most recent spots
- Quick cycling
- Best for: Real-time monitoring, contests

Medium History (5-7 spots):

- Good context of recent activity
- Balanced cycling time
- Best for: General use

Large History (10-15 spots):

- Extended context
- Longer cycling time

- Best for: Learning patterns, low-activity bands

6.3.3 Custom Display Titles

Creative title ideas:

- Your callsign: K3ABC
- Location: Shack or Mobile
- Event: Field Day or Contest
- Band + Mode: 20M FT8
- Humorous: DX or Die or CQ CQ CQ

6.4 Advanced Filter Commands

6.4.1 Understanding DX Cluster Filters

Filter commands are sent directly to the DX cluster after login. The exact syntax depends on the cluster software, but common patterns include:

6.4.2 Basic Band Filters

```
accept/spot 0 freq 160m # 160 meters
accept/spot 0 freq 80m # 80 meters
accept/spot 0 freq 40m # 40 meters
accept/spot 0 freq 20m # 20 meters
accept/spot 0 freq 15m # 15 meters
accept/spot 0 freq 10m # 10 meters
accept/spot 0 freq 6m # 6 meters
```

6.4.3 Frequency Range Filters (Cluster Dependent)

Some clusters support precise frequency ranges:

```
accept/spot 0 freq 14.000-14.100 # 20M CW only
accept/spot 0 freq 14.200-14.350 # 20M SSB
accept/spot 0 freq 7.000-7.125 # 40M CW/Digital
```

6.4.4 Clearing Filters

To remove all filters and see all bands:

```
clear/spots all
```

Or simply leave the filter field blank in configuration.

6.4.5 Multiple Band Filters (Cluster Dependent)

Some clusters allow multiple bands:

```
accept/spot 0 freq 20m or freq 15m or freq 10m # 20M, 15M, 10M only
```

Note: Filter syntax varies by cluster software. Consult your cluster's documentation (usually available via `help` command in telnet session) for supported filter commands.

6.4.6 Testing Filters via Telnet

Before configuring a complex filter in the DX Spotter:

1. Connect to the cluster via telnet from your computer
2. Login with your callsign
3. Test different filter commands
4. Once you find a filter that works, use it in the DX Spotter configuration

6.5 Serial Console Advanced Usage

6.5.1 Monitoring Device Behavior

The serial console (115200 baud) provides detailed operational information:

Startup Information:

- Firmware version
- MAC address
- Stored configuration loading
- WiFi connection process
- IP address assignment
- NTP time synchronization
- Cluster connection establishment

Runtime Information:

- Received spots with full details
- Cluster messages
- Connection status changes
- Reconnection attempts
- Error messages and warnings

Useful for:

- Debugging connection issues
- Understanding cluster behavior
- Monitoring network stability
- Development and customization

6.5.2 Serial Command Reference

The DX Spotter provides a serial CLI for headless management. Connect via USB at 115200 baud and type commands at any time during operation.

Command	Description
help	Display the list of available CLI commands
show	Print all current settings (WiFi SSIDs, cluster config, display settings, connection status)
reboot	Restart the device
reset	Factory reset — clears all saved settings (NVS) and reboots into config portal
upgrade	Trigger an OTA firmware update (requires active WiFi connection)
R or r	Factory reset during boot only — must be sent within 2 seconds of power-on

Tip: The show command displays live WiFi and cluster connection status including SSID, IP address, and RSSI, making it useful for remote diagnostics without a web browser.

Note: Commands are case-insensitive and processed non-blocking in the main loop, so they work regardless of whether the device is connected to WiFi or a cluster.

6.6 Network Administration

6.6.1 Port Usage

The DX Spotter uses the following network ports:

Port	Protocol	Purpose
80	TCP (HTTP)	Web configuration interface
53	UDP (DNS)	DNS resolution (outbound)
123	UDP (NTP)	Time synchronization (outbound)
7300*	TCP (Telnet)	DX Cluster connection (outbound, port varies)
443	TCP (HTTPS)	OTA firmware updates (outbound)

* Port number varies based on configured cluster

6.6.2 Firewall Considerations

For Normal Operation:

- Allow outbound TCP to cluster port (e.g., 7300)
- Allow outbound UDP to NTP servers (port 123)
- Allow outbound DNS (port 53)

For OTA Updates:

- Allow outbound HTTPS to u.morse.topbytes.net (port 443)

For Web Configuration:

- Allow inbound HTTP on port 80 (local network only)
- No external access required or recommended

Warning: Do not expose the DX Spotter's web interface to the internet! It has no authentication and is intended for local network access only.

6.6.3 Network Security Best Practices

1. Use WPA2 or WPA3 WiFi Security

Never connect to open/unsecured networks.

2. Isolate IoT Devices (Optional)

Consider placing the DX Spotter on a separate IoT VLAN or guest network.

3. Firewall Rules

If using advanced firewall rules, only allow required outbound connections.

4. Regular Firmware Updates

Keep firmware up to date for security patches.

5. Strong WiFi Password

Use a strong, unique password for your WiFi network.

6.7 Time Synchronization

6.7.1 NTP Configuration

The DX Spotter automatically synchronizes time via NTP (Network Time Protocol).

- NTP Server: pool.ntp.org
- Update Interval: Periodic automatic updates

Time Display:

- Format: 24-hour (HH:MM:SS)
- Updates every second
- Automatically adjusts for DST

6.8 Power Consumption and Optimization

6.8.1 Typical Power Usage

- **Normal Operation:** ~200-400mA @ 5V (1-2W)
- **WiFi Transmitting:** Up to 500mA peak
- **Display:** ~100-200mA (varies with content)

6.8.2 Battery Operation

Power Bank Sizing:

- 10,000 mAh power bank: ~40-50 hours runtime
- 20,000 mAh power bank: ~80-100 hours runtime

Best Practices:

- Use quality power banks with stable 5V output
- Avoid power banks that auto-shutoff with low current draw
- Consider power banks with "always-on" or "low-current" modes

6.9 What's Next?

- Review *Technical Specifications* for detailed specifications
- Return to *Operation* for daily usage information
- See *Troubleshooting* if you encounter issues

TECHNICAL SPECIFICATIONS

This section provides detailed technical specifications for the DX Spotter device.

7.1 Hardware Specifications

7.1.1 Wireless Connectivity

WiFi Standard

IEEE 802.11 b/g/n

Frequency Band

2.4 GHz only (5 GHz not supported)

WiFi Modes

Station (STA), Access Point (AP), STA+AP

Security

WPA, WPA2, WPA2-Enterprise

Antenna

On-board PCB antenna or external (model dependent)

Range

Typical 50-100m indoors, 300m+ line-of-sight

Note: The ESP32 does **not** support 5 GHz WiFi networks. Ensure your router has 2.4 GHz enabled.

7.1.2 Display

Type

OLED (Organic Light-Emitting Diode)

Resolution

256 x 64 pixels

Color Depth

16-level (4-bit per pixel)

Viewing Angle

160 degrees (typical for OLED)

Contrast Ratio

>2000:1

Display Technology

Passive Matrix OLED

Refresh Rate

Configurable (typically 60 Hz)

Backlight

Self-emitting (no backlight required)

Lifespan

10,000+ hours typical

7.1.3 Power Requirements

Input Voltage

5V DC +/-5% (via USB)

Input Current

500mA typical, 800mA peak

Power Consumption

1-2W typical

Connector

USB Micro

Battery Support

Via USB power bank (not included)

<p>Warning: Use only quality 5V USB power supplies rated for at least 1A. Insufficient power may cause boot loops or instability.</p>
--

7.1.4 Physical Specifications

Dimensions

Approximately 113mm x 46mm x 22mm

Weight

~50-80g

Mounting

Desktop/portable

Environmental Rating

Indoor use only

7.1.5 Operating Environment

Operating Temperature

0C to 40C (32F to 104F)

Storage Temperature

-20C to 60C (-4F to 140F)

Humidity

20% to 80% RH non-condensing

Altitude

Up to 2000m

Caution: Do not operate in direct sunlight, high humidity, or extreme temperatures. Avoid exposing to moisture.

7.2 Network Specifications

7.2.1 Supported Protocols

DX Cluster

Telnet (TCP) - primary protocol

Web Interface

HTTP (TCP port 80)

Time Sync

NTP (UDP port 123)

Firmware Updates

HTTPS (TCP port 443)

DNS

UDP port 53

7.2.2 DX Cluster Connection

Protocol

Telnet (raw TCP)

Default Port

7300 (configurable)

Connection Type

Long-lived persistent connection

Authentication

Callsign-based

Reconnect Interval

30 seconds on failure

Supported Clusters

Any standard DX cluster (CC Cluster, DXSpider, AR-Cluster)

7.2.3 Web Configuration Server

Protocol

HTTP/1.1

Port

80 (not configurable)

Interface

192.168.4.1 (AP mode) or assigned IP (STA mode)

Authentication

None (local network only)

Captive Portal

Yes (AP mode)

Warning: The web interface has **no password protection**. Do not expose to the internet! Use only on trusted local networks.

7.2.4 Time Synchronization

Protocol

NTP (Network Time Protocol)

Server

pool.ntp.org (default)

Timezone

GMT/BST with automatic DST

Sync Interval

Automatic periodic updates

Time Format

24-hour (HH:MM:SS)

7.2.5 Configuration Limits

Max WiFi SSIDs

1 (primary network only)

Max WiFi Password Length

63 characters (WPA/WPA2 standard)

Max Callsign Length

32 characters (practical limit)

Max Display Title

255 characters (display width limits practical length)

Max Spot History

15 spots

Scroll Interval Range

5000-60000 milliseconds

7.3 Display Specifications

7.3.1 Screen Layout

Total Area

256x64 pixels

Status Bar

~18 pixels height

Separator Line

1 pixel

Content Area

~45 pixels height

7.4 Performance Specifications

7.4.1 Boot Time

Cold Boot

~2-5 seconds to WiFi attempt

WiFi Connection

5-30 seconds (network dependent)

Cluster Connection

2-5 seconds (after WiFi connected)

Total to First Spot

10-40 seconds typical

7.4.2 Spot Processing

Parse Speed

<1ms per spot line

Display Update Rate

100ms loop cycle

Maximum Spot Rate

Limited only by cluster (typically 1-10 per second during busy periods)

Buffer Size

Up to 15 spots in history

7.4.3 Network Performance

WiFi Connection Time

5-30 seconds (typical)

Reconnect Attempts

Continuous every 5 seconds

Telnet Reconnect Delay

30 seconds on failure

Web Server Response

<100ms for static pages

Configuration Save Time

<500ms

7.4.4 Reliability

MTBF

>10,000 hours (estimated)

Automatic Recovery

WiFi and cluster disconnections

Watchdog Timer

Yes

Boot Stability

>99.9% successful boot rate

7.5 Compatibility

7.5.1 WiFi Router Compatibility

Compatible With

- All 2.4 GHz 802.11 b/g/n routers
- WPA/WPA2 secured networks
- Open networks (not recommended)
- Most home and portable routers

Not Compatible With

- 5 GHz only networks
- WPA3-only networks (WPA2 compatibility mode required)
- Enterprise WiFi with 802.1X (not supported)
- Captive portals requiring web authentication

7.5.2 DX Cluster Compatibility

Compatible With

- CC Cluster (most common)
- DXSpider
- AR-Cluster
- Any telnet-based DX cluster
- Standard DX spot format

Tested Clusters

- G3LRS (dxc.g3lrs.org.uk:7300)
- WA9PIE (wa9pie.net:7300)
- K3LR (dxc.k3lr.com:7373)

7.5.3 Power Source Compatibility

Compatible With

- USB wall adapters (5V, >500mA)
- Computer USB ports (USB 2.0/3.0)
- USB power banks
- USB car chargers

Not Recommended

- USB 1.0 ports (insufficient power)
- Weak/old USB chargers (<500mA)
- Long/thin USB cables causing voltage drop

7.6 Support and Documentation

7.6.1 Resources

- **User Manual:** This document
- **Product Website:** <https://dxspotter.topbytes.net>
- **Company Website:** <https://www.topbytes.net>

COMPLIANCE

This product complies with the essential requirements of the following EU directives:

Directive	Title
2014/53/EU	Radio Equipment Directive (RED)
2011/65/EU	Restriction of Hazardous Substances (RoHS), as amended by 2015/863
2012/19/EU	Waste Electrical and Electronic Equipment (WEEE)

8.1 Radio Equipment Information

Per RED Article 10(10)

8.1.1 WiFi Operating Parameters

Technology	IEEE 802.11 b/g/n (WiFi)
Operating frequency band	2400–2483.5 MHz
Maximum transmit power	<100 mW (20 dBm) EIRP
Number of channels	13 (EU)
Channel bandwidth	20 MHz
Antenna	Internal (PCB trace, non-removable)

8.2 RF Exposure Information

8.2.1 General Statement

This device complies with EU requirements for limiting exposure of the general public to electromagnetic fields, as assessed in accordance with EN 62311:2020.

The DX Spotter is a low-power device that transmits at a maximum of 100 mW EIRP in the 2.4 GHz band. It is designed for tablet/desktop use and is not intended to be worn on the body or held against the head.

8.2.2 Usage Distance

This device has been evaluated for RF exposure compliance at a minimum separation distance of **20 cm** between the device and the user's body. At this distance and power level, the electromagnetic field exposure is well below the limits set by the Council Recommendation 1999/519/EC (based on ICNIRP guidelines).

8.2.3 Recommendations

- Use the device on a desk, table, or shelf — not directly against the body
- Do not modify the antenna or connect external antennas
- If co-locating with other radio equipment, maintain reasonable separation

8.3 Safety Warnings

8.3.1 Power Supply

- **Use only a USB power supply that complies with applicable safety standards** (e.g., IEC 62368-1, CE marked). Using a non-compliant power supply may create safety hazards.
- The device requires a 5V DC power supply providing at least 500 mA, connected via USB-C cable.
- Do not exceed the rated input voltage of 5V DC.
- Disconnect the USB cable before cleaning the device.
- Do not use damaged cables or power supplies.

8.3.2 Operating Environment

- **Indoor use only.** This device is not designed for outdoor or weatherproof use.
- Operating temperature: 0°C to +40°C.
- Storage temperature: -20°C to +60°C.
- Humidity: 20% to 80% relative humidity, non-condensing.
- Do not expose the device to moisture, rain, or liquids.
- Do not use the device in dusty, dirty, or excessively hot or cold environments.
- Do not block ventilation openings or place the device in enclosed spaces without airflow.
- Maximum operating altitude: 2000 m above sea level.

8.3.3 General Safety

- **This device is not a toy.** Keep out of reach of small children.
- Do not disassemble, modify, or attempt to repair the device. There are no user-serviceable parts inside.
- Do not expose the device to strong magnetic fields, excessive vibration, or mechanical shock.
- If the device emits unusual smells, sounds, or smoke, disconnect the power immediately and contact the manufacturer.
- This device is intended for amateur radio hobbyists and general consumers. It is not intended for use in safety-critical, medical, or life-support applications.

8.3.4 OLED Display

- The OLED display may be susceptible to image retention (burn-in) if a static image is displayed for extended periods. The firmware includes measures to mitigate this.
- The display contains no mercury or hazardous backlighting.

8.4 Intended Use

The DX Spotter is a WiFi-enabled display device designed for amateur radio operators to monitor DX cluster spots. It connects to DX cluster servers via your existing WiFi network and displays real-time information about amateur radio DX activity.

Intended users: Licensed amateur radio operators, radio hobbyists, and general consumers.

Intended environment: Indoor domestic, office, or radio club station environments.

The device is not intended for:

- Outdoor installation
- Use in explosive or hazardous atmospheres
- Medical or safety-critical applications
- Use as a primary or sole source of emergency communications information

8.5 WEEE — Waste Disposal Information

Per WEEE Directive 2012/19/EU, Article 14

8.5.1 Disposal Instructions

This product is marked with the crossed-out wheellie bin symbol, indicating that it must **not** be disposed of with unsorted household waste when it reaches the end of its life.

Correct disposal: Take the product to a designated collection facility for the recycling of waste electrical and electronic equipment (WEEE). Contact your local authority or retailer for information on your nearest collection point.

8.5.2 Why Separate Collection Matters

Separate collection and recycling of waste electrical and electronic equipment helps to:

- Conserve natural resources
- Ensure hazardous substances are handled safely
- Protect the environment and human health

8.5.3 Batteries

This product does not contain an internal battery. If powered from a USB power bank, dispose of the power bank separately in accordance with Directive 2006/66/EC (Battery Directive) or its successor Regulation (EU) 2023/1542.

8.5.4 Producer Information

Producer	TopBytes Ltd
WEEE category	Category 3 — IT and telecommunications equipment

8.6 Manufacturer

Name	TopBytes Ltd
Address	55 Kings Ride, HP10 8BP, UK
Website	https://www.topbytes.net
Product support	https://dxspotter.topbytes.net
Email	support@topbytes.net

8.7 Firmware Updates

The DX Spotter supports over-the-air (OTA) firmware updates via WiFi. Firmware updates may include:

- Bug fixes and performance improvements
- New features
- Updates to maintain regulatory compliance

The device will check for updates automatically when connected to the internet. Updates are downloaded securely via HTTPS.

Note: Firmware updates do not change the radio parameters (frequency, power) beyond the limits declared in this documentation.

CHANGELOG

This page documents the version history and changes to the DX Spotter firmware.

9.1 Version 1.2.0

Release Date: 2026-04-05

9.1.1 New Features

Redesigned Spot Display Layout

- Spotter callsign and "DE" label moved to the bottom of the spot area for improved readability
- "DE" label now displayed at the same baseline as the spotter callsign (previously superscript)
- "DE" and "@" rendered in a smaller font to keep focus on callsign information

Spot Time Display

- Spot report time now shown on screen above the spotter callsign
- Time is automatically converted from UTC to the configured local timezone
- Displayed in HH:MM format with an "@" prefix
- Uses the timezone setting from the web configuration (see [Configuration](#))

Bug fix

- Fixed the display time to be local time.

9.2 Version 1.1.1

Release Date: 2026-03-05

9.2.1 Bug Fix

- Fixed the FIFO (First in First out) list for the spots.

9.3 Version 1.1.0

Release Date: 2026-02-24

9.3.1 New Features

Dropdown Cluster and Filter Presets

- Cluster host/port replaced with a dropdown selector in the web configuration portal
- 6 built-in cluster presets: HamServe G1FEF, Rusty Cluster, G3LRS UK, M0KGX, NC7J
- 5 built-in filter presets: All Bands, 20M Only, 40M Only, HF SSB, HF CW
- Support for up to 5 user-defined custom clusters (name, host, port)
- Support for up to 5 user-defined custom filters (name, command)
- Selecting a preset automatically populates host, port, and filter fields

Serial CLI for Headless Management

- New interactive serial command-line interface at 115200 baud
- `help` — display available commands
- `show` — print all settings and live connection status (WiFi, cluster, RSSI)
- `reboot` — restart the device
- `reset` — factory reset (clear NVS settings and reboot into config portal)
- `upgrade` — trigger OTA firmware update
- Commands are case-insensitive and work in any device state
- Startup banner reminds users of CLI availability

Firmware upgrade

- Progress now reporting back to webpage. Once complete page goes back to configuration
- Better upgrade failure protection

Misc

- Help button added to top of configuration webpage
- Register button, displays if device is not registered, pre-fills device ID for registration page.

9.4 Version 1.0.9

Release Date: 2026-01-09

9.4.1 New Features

Configurable Timezone

- New timezone setting in web configuration
- Dropdown with 20 common worldwide timezones
- Automatic daylight saving time adjustment where applicable
- Default set to UTC
- Changes take effect immediately without reboot

9.5 Version 1.0.8

Release Date: 2026-01-03

9.5.1 New Features

WiFi Connection Display

- Shows WiFi network name and IP address on successful connection
- Displays for 10 seconds before proceeding to show spots
- Helps users confirm network connection and find device IP

Monospace Fonts with Slashed Zeros

- Callsigns and frequencies now use monospace fonts
- Slashed zeros (0) clearly distinguish from letter O
- Improved readability for amateur radio callsigns

9.6 Version 1.0.7

Release Date: 2025-12-29

9.6.1 New Features

Enhanced Spot Display with Spotter Callsign

- Spotter callsign now displayed on the comment line
- "DE" prefix shown as superscript before the spotter callsign
- Vertical separator line between spotter callsign and comment
- Clear visual distinction between spotter info and comment text

Scrolling Comment Text

- Comments now scroll horizontally from right to left
- All comments scroll regardless of length for consistent appearance
- Comments loop continuously until it's time to advance to the next spot
- Spot only advances after at least one complete scroll of the comment
- Smooth scrolling animation with configurable speed

Improved Frequency Display

- Frequencies now displayed in MHz (most common) or GHz (microwave bands)
- Commas added for thousands separation (e.g., 1,296.000 MHz)
- Appropriate decimal precision based on frequency range
- Cleaner, more readable frequency presentation

9.7 Version 1.0.6

Release Date: 2025-11-29

9.7.1 New Features

Multiple WiFi Credentials with Priority

- Store up to 5 WiFi network credentials
- Priority-based connection attempts
- Device scans for available networks on boot
- Automatically connects to highest-priority available network
- Drag-and-drop reordering in web interface
- Add/remove WiFi networks without losing other settings
- Seamless roaming between configured networks

Enhanced WiFi Management

- Visual priority indicators (1-5) for each network
- Individual delete buttons for each credential
- Network scanner integration - add scanned networks directly to list
- Password fields support "keep existing" behavior
- Legacy single-credential migration on first boot
- Intelligent WiFi reconnection with retry logic
- When WiFi disconnects, device scans and tries all configured networks before falling back to AP mode
- Automatic reconnection attempts every 10 seconds (max 3 attempts before AP mode)
- Prevents flapping between STA and AP modes during temporary network issues

Automatic Firmware Updates via Factory WiFi

- When connected to factory default WiFi, device automatically checks for firmware updates
- Only installs released versions (dev builds are skipped)
- Compares version numbers to determine if update is available
- Displays update information on OLED before installing
- Fully automatic - no user interaction required
- Provides "emergency update" capability for devices in the field

9.7.2 Web Interface Improvements

- Complete redesign of WiFi settings section
- Drag-and-drop interface for priority reordering
- Visual feedback during drag operations
- Maximum 5 networks enforced with user-friendly error messages
- Responsive design works on mobile and desktop

9.7.3 Upgrade Notes

- Existing single WiFi credential will be automatically migrated to new format
- After upgrade, you can add additional WiFi networks
- No configuration loss during OTA update
- Reboot required when WiFi credentials are modified
- Factory default WiFi credentials are hidden and tried as last resort
- If device can see factory WiFi and has internet access, it will automatically check for and install newer released firmware versions on boot

9.8 Version 1.0.5

Release Date: 2025-11-28

9.8.1 New Features

Display Rotation

- Added display rotation setting for upside-down mounting
- Configurable via web interface dropdown
- Two options: Normal (0 degrees) or Flipped (180 degrees)
- Useful when mounting device in different orientations

Device ID Display

- Added Device ID to configuration page
- Displayed at top of configuration interface
- Read-only field for device identification
- Useful for managing multiple DX Spotters
- Helpful for network troubleshooting and MAC filtering

9.9 Version 1.0.4

Release Date: 2025-11-27

9.9.1 New Features

Configurable Device Name

- Added device name configuration setting in web interface
- Device name is used for DHCP hostname and mDNS identification
- Default value: `dxspotter`
- Allows users to identify multiple DX Spotters on the same network
- Configurable via web interface under "Device Name (DHCP/mDNS Hostname)"

Enhanced Error Display

- Telnet connection errors now displayed on OLED screen

- Shows connection status during connection attempts
- Displays error messages when cluster connection fails
- Countdown timer shown during retry attempts
- Prevents normal spot display from overwriting error messages

Filter Validation

- DX cluster filter commands are now validated automatically
- Invalid filter syntax is detected and reported
- Error messages from cluster displayed on OLED screen
- Helps users identify filter configuration problems quickly
- Works with all standard cluster error responses

Duplicate Login Detection

- Automatically detects when kicked off cluster due to duplicate callsign
- Prevents reconnect loop when multiple devices use same callsign
- Displays clear error message explaining the issue
- Stops automatic reconnection attempts to avoid cluster flooding
- Instructs user to either change callsign (e.g., add /2) or disconnect other device
- Saving configuration automatically resets error state and retries connection
- No power cycle needed - just update callsign and save

Factory Reset Button

- Added Factory Reset button to web configuration page
- Confirmation prompt prevents accidental resets
- Erases all settings including WiFi credentials, callsign, and cluster configuration
- Device reboots into configuration mode after reset
- Optimized for iOS captive portal compatibility
- Shows success page before rebooting

9.9.2 Improvements

Callsign Validation

- Displays "Configuration Error" message on screen when callsign is not configured
- Prevents connection attempts with invalid callsign (blank or "NOCALL")
- Clear instructions displayed: "Callsign not set - Please configure"

Serial Console Improvements

- Reduced serial console spam for recurring errors
- Error messages now print only once instead of every loop iteration
- Cleaner serial output for debugging and monitoring
- Factory reset status clearly logged with visual separators

Display Error Handling

- Fixed issue where error messages were immediately overwritten
- Error messages now remain on screen until resolved

- Improved visibility of connection and filter errors

Configuration Save Improvements

- Saving configuration now resets all error flags
- Duplicate login errors automatically cleared when saving new callsign
- No need to power cycle after fixing configuration errors
- Immediate reconnection attempt after saving cluster settings

9.9.3 Bug Fixes

- Fixed filter error messages not displaying on OLED screen
- Fixed serial console continuously scrolling error messages after factory reset
- Fixed `displayingConnectionError` flag being cleared prematurely
- Improved error message persistence during cluster connection issues
- Fixed duplicate login flag not being reset when configuration is saved
- Fixed device not attempting reconnection after changing callsign to resolve duplicate login

9.9.4 Configuration Changes

- New configuration field: `deviceName` (default: "dxspotter")
- Device name stored in NVS preferences
- Legacy devices will default to "dxspotter" on first update

9.9.5 Known Issues

None reported.

9.9.6 Upgrade Notes

- Existing configurations will be preserved during OTA update
- New `deviceName` field will default to "dxspotter"
- If you have multiple DX Spotters, configure unique device names after updating
- Factory reset functionality requires compatible web browser (all modern browsers supported)

9.10 Version 1.0.2

Release Date: 2025-11-20

9.10.1 Initial Features

- WiFi connectivity with WPA/WPA2 support
- DX cluster telnet connection
- OLED display with smooth scrolling
- Band filtering support
- Configurable spot history (1-15 spots)
- Adjustable scroll interval
- Web-based configuration interface
- Captive portal for initial setup
- OTA firmware update support
- NTP time synchronization with GMT/BST automatic DST
- WiFi signal strength indicator
- Automatic reconnection on network drops
- Network scanning in configuration portal

9.11 Version History

Version	Date	Summary
1.2.0	2026-04-05	Redesigned spot layout with spot time display and local timezone conversion
1.1.0	2026-02-24	Dropdown cluster/filter presets with custom entries, serial CLI for headless management
1.0.8	2026-01-09	WiFi connection display, configurable timezone, and monospace fonts with slashed zeros
1.0.7	2025-12-29	Enhanced spot display with spotter callsign, scrolling comments, and improved frequency formatting
1.0.6	2025-11-29	Multiple WiFi credentials with priority-based connection, drag-and-drop re-ordering, and automatic firmware updates via factory WiFi
1.0.5	2025-01-28	Added display rotation setting for upside-down mounting
1.0.4	2025-01-27	Added device name configuration, enhanced error display, filter validation, and factory reset
1.0.2	2025-01-XX	Initial release with core DX cluster functionality

QUICK LINKS

- [genindex](#)
- [search](#)

ABOUT THIS MANUAL

This manual covers:

- Initial setup and WiFi configuration
- DX cluster connection settings
- Band filtering and display customization
- Troubleshooting common issues
- Advanced features and OTA updates

REGULATORY AND SAFETY INFORMATION

Per Radio Equipment Directive 2014/53/EU, Article 10(9)

Hereby, **TopBytes Ltd** declares that the radio equipment type **DX Spotter** (Model: DXSPOT-02) is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of *Compliance*

CHAPTER
THIRTEEN

SUPPORT

For additional support, please visit:

- Website: <https://www.topbytes.net>
- DX Spotter Portal: <https://dxspotter.topbytes.net>

INDEX

C

compliance, 65